

Hoist Safety Instructions

- If unfamiliar with hoist,
 - **Get Help from SIYC Waterfront Staff**
 - Practice using the buttons to raise/lower the hook and swing the boom before lifting the boat
- Do not exceed the capacity of this hoist which is 4,000 lbs.
- Confirm that boat attachment points will hold the weight of the boat
 - Do not use H-bracket and slings
- When lifting boat...
 - Stay a safe distance away from boat
 - Use bow and stern lines to guide the boat from a distance
 - Do not leave boat unattended when in hoist
- When finished...
 - Raise hook at least 8 feet above the ground
 - Hang control unit on hook on post
- Wind and rain increase the risk of injury and boat damage
 - In adverse conditions, get help and/or wait for a better day.

Use Hoist at Your Own Risk